

REPLACEMENT PARTS CATALOG NO. 341



VOLUME ONE

| | | |
|---------------|---------------|-----------------|
| G18U | G22CU | JT22CW |
| G18W | G22CW | JT22CW-2 |
| GA18 | GL22C | G26CU |
| GL18M | GL22MC | G26CW |
| G22U | GT22CU | GT26CW |
| G22W | GT22CW | GT26CU-2 |
| G22WAC | GT22LC | GT26CW-2 |

LOCOMOTIVES



Electro-Motive Division
La Grange, Illinois, U.S.A., 60525

645 ENGINE—REFER TO CAT. 300

VOLUME ONE

WATER, LUBE AND FUEL OIL SYSTEM

FUEL SYSTEM EQUIPMENT

LUBE OIL FILTER AND COOLER

ACCESSORY RACK EQUIPMENT

INERTIAL AIR SYSTEM

AIR SYSTEM EQUIPMENT

AIR AND EXHAUSTER COMPRESSOR, AIR COMPRESSOR

MECHANICAL DRIVES

TRUCK AND ASSOCIATED EQUIPMENT

FLEXIBLE COUPLINGS, DIAL GAUGES, BALL COCK VALVES

SANDING EQUIPMENT

WINDOW WIPER, SPEED RECORDER

CAB EQUIPMENT

COUPLER, DRAFT GEAR

HORN, BELL

DYNAMIC BRAKE HATCH EQUIPMENT

ELECTRICAL CONTROL CABINET

VOLUME TWO

MAIN GENERATOR-ALTERNATOR

BLOWERS AND DRIVES

AUXILIARY GENERATOR

TRACTION MOTOR MOUNTING

TRACTION MOTORS

CIRCUIT MODULES

MOTOR DRIVEN FUEL PUMP, CAB HEATER, GRID BLOWER,
AIR DISCHARGE MOTOR

OVERNIGHT HEATER EQUIPMENT

CONTROL CONSOLE

REGULATORS—LOAD, VOLTAGE

MAGNET VALVES

CIRCUIT BREAKERS, FUSES, MANUAL SWITCHES

AUXILIARY INTERLOCKS

CONTACTORS, RELAYS, MAGNETIC SWITCHES

CONTROL SWITCHES

CONTROL JUMPER, RECEPTACLES, PLUGS

LIGHT ASSEMBLIES

TERMINAL BOARDS

RESISTORS, RHEOSTATS, RECTIFIERS

GENERAL LISTS—ELECTRICAL

NUMERICAL INDEX

REPLACEMENT PARTS CATALOG NO. 341 INDEX

REPLACEMENT PARTS CATALOG NO. 341

TABLE OF CONTENTS

VOLUME ONE

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|-------------------|--|-------------|----------|---|
| 100 | GROUP - 645 ENGINE - Refer To Catalog No. 300 | | | |
| 500 | GROUP - WATER, LUBE AND FUEL OIL SYSTEM | | | |
| D513-E | Water, Lube and Fuel Oil System | | | |
| | Water, Lube and Fuel Oil Equipment | ---- | 1-5 | G18U,G18W,GA18 |
| | Radiators, Tank, Exchanger | | | |
| | Filters and Regulator | ---- | 6-9 | GL18M |
| | Water, Lube and Fuel Oil Equipment | ---- | 10-14 | G22U,G22W,G22CU,G22CW, |
| | Radiators, Tank, Heater, Exchanger, | ---- | 15-20 | GL22C |
| | Filters and Regulator | ---- | 21-26 | JT22CW |
| | Water, Lube and Fuel Oil Equipment | ---- | 27-32 | G26CU,G26CW |
| | Low Water Cut-off Application | ---- | 33-34 | G22CU,G22CW |
| B525-E | Two Element Thermostatic Valve | 8224544 | 1 | G18U,G18W,GA18 |
| C543-E | Engine Water Cooling System | | | |
| | Radiators, Fittings, Gaskets and Couplings | ---- | 1-7 | GT22CU,GT22CW |
| | Radiators, Fittings, Gaskets and Couplings | ---- | 8-12 | GT26CW |
| | Radiators, Fittings, Gaskets and Couplings | ---- | 13-16 | GT26CU-2,GT26CW-2 |
| | Fuel Oil Preheater and Piping | ---- | 17-19 | |
| | Fuel Tank Heater and Deck Mounted | | | |
| | Water Piping | ---- | 20-26 | GT26CW-2 |
| A544-E | Water Tank Level Gauge | ---- | 1 | G18U,G18W,GA18,GL18M, G22U,G22W,G22CU,G22CW, GL22C,GT22CU,GT22CW, GT22HW,JT22CW,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2, GT26CW-2 |
| A549-E | Engine Water Cooling Radiator | | | |
| | Radiator Assembly Reference Chart | ---- | 1 | G18U,G18W,GA18,GL18M |
| | Radiator Assemblies | ---- | 2-11 | G22U,G22W,G22CU,G22CW, GL22C,GT22CU,GT22CW, JT22CW,JT22CW-2,G26CU, G26CW,GT26CW,GT26CU-2, GT26CW-2 |
| A554-E | Automatic Shutters and Operating Mechanism | | | |
| | Screens, Shutters and Operating Rods | ---- | 1-2 | G22W,G22CU,GL22C,G26CW |
| | Grill, Screen, Shutter and Operating Rod | ---- | 3-4 | G18U,G18W,GA18 |
| | Shutters, Mounting and Fittings | ---- | 5-6 | GT26CW |
| | Grills, Shutters, Mountings and Fittings | ---- | 7-8 | GT22CU,GT22CW,JT22CW-2, GT26CW,GT26CU-2,GT26CW-2 |
| | Screens, Shutters and Operating Rods | ---- | 9-10 | G22U,G22W,G22CU,G22CW, GL22C,G26CU,G26CW |
| | Screens, Shutters and Operating Rods | ---- | 11-13 | G26CU,G26CW |
| | Shutter Assembly | 9329709 | 14 | GL18M |
| | Shutter Assemblies | ---- | 15 | G22U,G22W,G22CU,G22CW, GL22C |
| | Shutter Assemblies | ---- | 16 | G22U,G22W,G22CU,G22CW, GL22C,G26CU,G26CW |
| | Shutter Assemblies | ---- | 17 | G26CU,G26CW |
| | Shutter Assemblies | ---- | 18 | G26CU,G26CW |
| | Shutter Assemblies | ---- | 19 | JT22CW,GT26CW |
| | Shutter Assemblies | ---- | 20 | JT22CW-2 |
| | Shutter Assemblies | ---- | 21 | GT22CU,GT22CW,GT26CW, GT26CW-2 |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|---|--|-------------|----------|---|
| A555-E | Air Cylinder Shutter Operating Air Cylinder | ---- | 1 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| 700 GROUP - FUEL SYSTEM EQUIPMENT | | | | |
| D750-E | Fuel System Equipment | | | G18U,G18W,GL18M,G22U,G22W, G22CU,G22CW,GL22C |
| | Fuel Tanks, Gauges and Fillers - Reference List | ---- | 1-2 | GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Fuel Tank Mounting Hardware | ---- | 3 | |
| | Full Length Fuel Sight Level Gauge | ---- | 4 | G18U,G18W,GL18M,G22U,G22CU, G22CW,GL22C,GT22CU, GT22CW,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Full Length Fuel Sight Level Gauge - Nathan Glo-Rod | ---- | 5 | GT26CW-2 |
| | Float Type and Underframe Mounted Fuel Level Gauges | ---- | 6 | GA18,GT22CW,JT22CW,JT22CW-2, G26CU,G26CW,GT26CW GT26CU-2,GT26CW-2 |
| | Fuel Tank Filler Assembly | ---- | 7 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW, GL22C,GT22CU,GT22CW, JT22CW,JT22CW-2,G26CU, G26CW,GT26CW,GT26CU-2, GT26CW-2 |
| | Flame Arrestor, Fuel Suction Strainer and Fuel Filter | ---- | 8 | |
| B780-E | Fuel Oil Heat Exchanger | ---- | 1 | JT22CW-2,G26CU,G26CW,GT26CW-2 |
| | Fuel Oil Heat Exchanger Thermostatic Mixing Valve | ---- | 2 | JT22CW-2,GT26CW-2 |
| 900 GROUP - LUBE OIL FILTER AND COOLER | | | | |
| C938-E | Lube Oil Cooler Lube Oil Cooler Assembly | ---- | 1-2 | GT22CU,GT22CW,GT26CU, GT26CW,GT26CU-2,GT26CW-2 |
| A940-E | Lube Oil Filter | | | G18U,G18W,GA18,GL18M |
| | Two Element With Internal By-Pass Valve | 8362642 | 1 | G22U,G22W,G22CU,G22CW, GL22C,GT22CU,GT22CW, G26CU,G26CW |
| | Four Element With External By-Pass Valve | ---- | 2 | |
| | Five Element With External By-Pass Valve | 9500899 | 3 | JT22CW-2 |
| | Seven Element With External By-Pass Valve | ---- | 4 | JT22CW,GT26CW,GT26CU-2, GT26CW-2 |
| 1000 GROUP - ACCESSORY RACK EQUIPMENT | | | | |
| C1007-E | Accessory Rack Equipment | ---- | 1-8 | GT22CU,GT22CW,GT26CU-2, GT26CW-2 |
| | Accessory Rack Equipment | ---- | 9-13 | GT22HW,JT22CW-2 |
| | Accessory Rack Equipment | ---- | 14-20 | GT26CW |
| 1040 GROUP - INERTIAL AIR SYSTEM | | | | |
| B1045-E | Inertial Air System | | | |
| | Inertial Air Compartment Equipment | ---- | 1-2 | } GT26CW |
| | Dust Bin Air Discharge Blower Assembly | 8446460 | 3-4 | |
| | Engine Room Partition | ---- | 5-6 | |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|---|--|---------------------------|-----------------------|---|
| B1045-E | Inertial Air System (Continued) Inertial Air Compartment Equipment Dust Bin Air Discharge Blower Assembly Engine Room Partition | ----- 8457170 ----- | 7-9 10-11 12-13 | } GT22CU,GT22CW,GT26CU-2 GT26CW-2 |
| 1090 GROUP - AIR SYSTEM EQUIPMENT | | | | |
| ----- | Air and Air Brake Equipment List (Refer to Specific Unit Index) | | | |
| C1093-E | Air Brake Equipment Main Air Reservoir List Main Air Reservoir Check Valves and Safety Valves | ----- ----- | 1 2 | } G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | No. 2 Main Air Reservoir Automatic and Manual Drain Valve | ----- | 3 | G18W,GA18,GL18M,G22W, G22CU,G22CW,GL22C, GT22CU,GT22CW,G26CW, GT26CW,GT26CW-2 |
| | Main Air Reservoir Manual Drain and Check Valves | ----- | 4 | G18U,G18W,GA18,G22W,G22CU, G22CW,GL22C,GT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Main Air Reservoir Manual Drain Valves Cartridge type 599-1,599-4 and 595-5 Spring Loaded Check Valves | ----- ----- | 5 6 | GT26CW G18U,GL18M,G22W,GL22C, GT22CW,GT26CW,GT26CW-2 |
| | 571-4 Three Way Relay Valve Brake Pipe Brake In Two Warning Whistle Reset Push Valve | 8450784 8297187 | 7 8 | GL18M,GT26CW G22W,JT22CW,GT26CW,GT26CW-2 |
| | Overspeed Reset Push Pull Valve A.C. Cabinet Centrifugal Air Filter | 8258221 8333051 | 9 10 | GA18,G22CU,GT26CW-2 G22W,G22CU,GT22CU,GT22CW, GT26CW,GT26CU-2,GT26CW-2 |
| C1094-E | Air Brake Hose Brake Cylinder and End Connection Hoses Wire Braided Rubber Brake Cylinder and End Connection Hoses Cotton Braided Rubber | ----- ----- | 1 2-5 | } G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| A1095-E | Air Filter Auxiliary Main Reservoir Line Centrifugal Air Filter | 8465764 | 1-2 | G26CU |
| 1100 GROUP - AIR AND EXHAUSTER COMPRESSOR AND AIR COMPRESSOR | | | | |
| D1100-E | Air and Exhauster Compressor Model WXOV Compressor Pistons, Rings and Ring Sets | ----- ----- | 1-5 6 | } G16U,G16W,G18U,GA18, GL18M,G22CW,GT22CW |
| D1106-E | Air and Exhauster Compressor Model ADJV Compressor Piston Assemblies and Ring Sets | ----- ----- | 1-4 3 | } G18U,G22CU,GL22C,GT26CW-2 |
| E1112-E | Air and Exhauster Compressor Model ABOV Compressor Piston Assemblies and Ring Sets | ----- ----- | 1-5 4 | } G18U,G22W,GL22C,JT22CW |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|-------------------|--|-------------|----------|---|
| D1144-E | Air Compressor | | | G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2 |
| | Model WBO and WBG Reference Chart | ---- | 1 | |
| | Model WBO and WBG Air Compressor | ---- | 2-11 | |
| | Pistons, Rings and Ring Sets | ---- | 12 | |
| | WBO Oil Pump Conversion Kits | ---- | 13 | |
| D1152-E | Oil Pressure Relief Valve | | | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Oil Pressure Relief Valve Assemblies | ---- | 1-2 | |
| C1155-E | Intercooler | ---- | 1 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2 |
| C1158-E | Lubricating Oil Pump | | | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Lubricating Oil Pump Assembly | 8130811 | 1 | |
| | Lubricating Oil Pump Assembly | 8317892 | 2 | |
| | Lubricating Oil Pump Assembly | 9311027 | 3 | Henschel BBC AC/AC Comp. Set |
| D1161-E | Pressure and Suction Valves | | | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Low Pressure and Vacuum Cylinder Discharge Valve | ---- | 1 | |
| | Low Pressure Cylinder Suction Unloading Valve | ---- | 2 | |
| | Vacuum Cylinder Suction Unloading Valve | ---- | 3 | |
| | High Pressure Cylinder Discharge Valve | ---- | 4 | |
| | High Pressure Cylinder Suction Unloading Valve | ---- | 5-6 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| C1164-E | Crankcase Breather and Air Filters | | | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Crankcase Breather | ---- | 1 | |
| | Air Compressor Air Filters | ---- | 2-3 | |
| C1165-E | Air Compressor Filter Application | | | G18U,G22CU,G22CW,GL22C, GT22CW,JT22CW G18U,G18W,G22W,G22CU, G22CW,GT22CU,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2 |
| | WXOV, ADJV and ABOV Compressor | ---- | 1-2 | |
| | WBO and WBG Compressors | ---- | 3-4 | |
| | WXOV Compressors | ---- | 5 | |
| | ADJV Compressors | ---- | 6 | GL18M GT26CW-2 |
| C1180-E | Air Compressor Unloader Panel | | | G18U,G18W,G22U,G22W,G22CU, G22CW,GL22C,JT22CW-2, G26CU,G26CW GT22HW |
| | Air Compressor Unloader Panel Assembly | 8384452 | 1-2 | |
| | Air Compressor Unloader Panel Assembly | 9314421 | 3-4 | |
| | Air Compressor Unloader Panel Assembly | 8478153 | 5-6 | |
| | Air Compressor Unloader Panel Assembly | 9512623 | 7-8 | |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|-------------------|--|-------------------------|------------|--|
| 1200 | GROUP - MECHANICAL DRIVES | | | |
| C1200-E | Air Compressor Mounting and Drive Mounting, Drive Shaft, Flexible Couplings and Guards - ABOV, ADJV,WBO and WXOV Air Compressor | ---- | 1-2 | G18U,G18W,G22U,G22W,G22CU, G22CW,GL22C,G26CU,G26CW |
| | Mounting, Drive Shaft, Flexible Couplings and Guards - WBG, WBO and WXOV Air Compressors | ---- | 3-4 | GA18,G22CU |
| | Mounting, Drive Shaft, Flexible Couplings and Guards - ABOV and WBO Air Compressors | ---- | 5-6 | JT22CW,JT22CW-2 |
| | Mounting, Drive Shaft, Flexible Couplings, Guards and Piping - WBO Air Compressor | ---- | 7-8 | GT22CU,GT22CW,GT26CU-2, GT26CW-2 |
| B1205-E | Radiator Cooling Fan Radiator Cooling Fan, Drive, Coupling and Guard | ---- | 1-2 | G18U,G18W,GA18 |
| C1210-E | Speed In increaser and Cooling Fan Speed In creaser, Fan and No. 2 End Traction Motor Blower Drive Asy. Air Ducts, Mounting, Drive, Couplings and Guards | ----- ----- ----- | 1-5 6-8 | G22U,G22W,G22CU,G22CW, GL22C,G26CU,G26CW |
| 1500 | GROUP - TRUCK AND ASSOCIATED EQUIPMENT | | | |
| ---- | Truck Assembly (Refer to Specific Unit Index) | | | |
| D1522-E | Traction Motor Air Duct | | 1 | G18U,G18W,G22U,G22W |
| | Air Duct Application | ---- | 2 | GL18M,G22CU,GL22C, G26CU,G26CW |
| | Air Duct Assembly | 8254772 | 3 | JT22CW-2,G26CW,GT26CW, GT26CW-2 |
| | Air Duct Assembly | ---- | 4 | G22CU,G22CW,GT22CU, GT22CW,GT26CU-2,GT26CW-2 |
| | Air Duct Assembly | ---- | 5 | G22CW |
| | Air Duct Assembly | ---- | 6 | G22CW,JT22CW |
| | Air Duct Assembly | ---- | 7 | G22CU,G26CU,GT26CU-2 |
| D1556-E | Journal Boxes | | | |
| | Hyatt 5-1/2 x 10 JMRA Roller Bearing Journal Box | ---- | 1-2 | G18U,G18W,G22W,G22CU, JT22CW-2,G26CW,GT26CW, GT26CU-2,GT26CW-2 |
| | Hyatt 6 x 11 and 6-1/2 x 12 Hy-Roll Taper Roller Journal Box | ---- | 3 | G18W,GA18,G26CW,GT26CW |
| | Timken 6 x 11 Taper Roller Bearing Journal Box | 8342136 | 4 | G18U,GL18M,G22U,G22W,GL22C |
| | Timken 6-1/2 x 12 Hy-Roll Taper Roller Bearing Journal Box | 8289941 | 5 | G18U,G22U,G22W,G22CU, GT22CU,G26CU,GT26CU-2 |
| | Hyatt 6-1/2 x 12 Hy-Roll Taper Roller Bearing Journal Box | 7475501 | 6 | G22CU,G22CW,GT22CU, GT22CW,G26CU,GT26CW |
| | Hyatt 6-1/2 x 12 Straight Roller Bearing Journal Box | ---- | 7-8 | G22CW |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|--|---|-------------|----------|---|
| D1556-E | Journal Boxes (Continued) Timken 6-1/2 x 12 Tapered Roller Bearing Journal Boxes and Adapters | ---- | 9 | G18W,G22W,G22CU,G22CW, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CW-2 |
| A1565-E | Drive Shaft Assembly Outboard and Inboard Drive Gear Unit Drive Shaft Assemblies | ---- | 1 | GA18 |
| B1570-E | Axle Drive Gear Unit Inboard and Outboard Axle Drive Gear Units | ---- | 1-4 | GA18 |
| D1580-E | Hand Brake No. 800 - RG Hand Brake Assembly | ---- | 1-2 | G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,G26CU, G26CW,GT26CW,GT26CU-2, GT26CW-2 |
| | No. 840 - DR Hand Brake Assembly | ---- | 3-4 | G18U,G18W,GA18 |
| | No. 850 - NS Hand Brake Assembly | ---- | 5-6 | JT22CW,GT22CW-2 |
| | No. 840 - FL Hand Brake Assembly | 9329015 | 7-8 | GL18M |
| 1800 GROUP - FLEXIBLE COUPLINGS, DIAL GAUGES AND BALL COCK VALVES | | | | |
| H801 | Flexible Couplings Air, Water, Lube Oil Flexible Coupling Reference List | ---- | 1-2 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Flexible Couplings and Sealing Compounds | ---- | 3 | |
| | Air, Water, Lube Oil Threaded and Bolted Flexible Coupling Reference List | ---- | 4 | |
| D1805-E | Dial Gauges Lube Oil Pressure Gauges | ---- | 1 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Single Pointer Main Reservoir and Vacuum Air Control Gauges | ---- | 2 | |
| | Duplex Vacuum and Pressure Gauges | ---- | 3 | |
| | Brake Pipe Air Flow Indicator | 8387634 | 4 | |
| | Water Temperature Gauges | ---- | 5 | |
| | Vacuum, Air, Water and Lube Oil Gauges | ---- | 6 | |
| J1850 | Ball Cock Valves Air, Fuel Oil, Lube Oil and Water Ball Cock Valves | ---- | 1-4 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| 1900 GROUP - SANDING EQUIPMENT | | | | |
| D1900-E | Sanding Equipment Two Way Check Valves and Sand Traps | ---- | 1 | G18U,G18W,GA18,G22W,G22CU, G22CW,GL22C,GT22CU, GT22CW,JT22CW-2,G26CU, G26CW,GT26CW,GT26CU-2, GT26CW-2 |
| | 500-BS-1-20 Solenoid Actuated Sander Control Valve | 8468204 | 2 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CW,GL22C, GT22CU,GT22CW,JT22CW-2, G26CW,GT26CW,GT26CU-2, GT26CW-2 |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|-------------------|--|-----------------------------|---------------|--|
| D1900-E | Sanding Equipment (Continued) Manual Foot Sanding, Service Brake Foot Pedal and Air Horn Switch | 8295369 | 3 | GL18M, JT22CW, GT26CW |
| 2100 | GROUP - WINDOW WIPER AND SPEED RECORDER | | | |
| C2106-E | Window Wiper Window Wiper Air Motor, Blades and Air Line Air Motors | ----- ----- | 1-9 10-14 | G18U, G18W, GA18, GL18M, G22U, G22W, G22CU, G22CW, GL22C, GT22CU, GT22CW, JT22CW, JT22CW-2, G26CU, G26CW, GT26CW, GT26CU-2, GT26CW-2 |
| | Pressure Regulating Valve | 8310366 | 15 | G18U, G18W, GA18, G22U, G22W, G22CU, G22CW, GL22C, GT22CU, GT22CW, JT22CW, JT22CW-2, G26CU, G26CW, GT26CW, GT26CU-2, GT26CW-2 |
| B2133-E | Speed Recorder 0 to 120 KPH and 0-75 MPH Speed Recorders Speed Recorder Head | ----- ----- | 1-6 7-8 | G18U, G22W, G22CU, GL22C G18U, G22W, G22CU, GL22C, G26CW |
| | Flexible Shaft, Hose and Conduit | ----- | 9-10 | G18U, G22W, G22CU, GL22C, G26CW |
| A2137-E | Speed Recorder Bantam Speed Recorder Right Angle Drive Assembly | 8309531 8448879 | 1-2 3 | G18U |
| 2400 | GROUP - CAB EQUIPMENT AND PILOTS | | | |
| D2410-E | Cab Equipment Arm Rest and Sun Visor Assembly | ----- | 1 | G18U, G18W, GA18, GL18M, G22U, G22W, G22CU, G22CW, GL22C, GT22CU, GT22CW, JT22CW, JT22CW-2, G26CU, G26CW, GT26CW, GT26CU-2, GT26CW-2 |
| | Metal Awnings and Rear View Mirrors | ----- | 2 | GL18M, G22CU, G22CW, GL22C, GT22CU, GT22CW, GT26CW, GT26CU-2 |
| | Arm Rest, Visor, Cab Vent and Locks Safety Control Alarm Box Assembly | ----- 9311095 | 3 4 | JT22CW, JT22CW-2 GL22C, JT22CW |
| D2415-E | Cab Sliding Sash and Stationary Windows Cab Front and Rear Facing Stationary Windows Cab Sliding Sash - Aluminum | ----- ----- | 1-2 3-7 | G18U, G18W, GA18, GL18M, G22U, G22W, G22CU, G22CW, GL22C, GT22CU, GT22CW, JT22CW, JT22CW-2, G26CU, G26CW, GT26CW, GT26CU-2, GT26CW-2 |
| D2420-E | Cab Seats Cab Seat Assembly - Fold Down Removable Back Rest, No Arm Rest, Slide Rail Mounted | 8196957 | 1 | G18U, G18W, GA18, GL18M, G22U, G22W, G22CU, G22CW, GL22C, GT22CU, GT22CW, JT22CW-2, G26CU, G26CW, GT26CW, GT26CU-2, GT26CW-2 |
| | Cab Seat Assembly - Fold Down Back Rest, No Arm Rest, Slide Rail Mounted Slide Rail Mounted Folding Cab Seat Assembly and Folding Observer's Seat Observer's Cab Seat Assembly | 9087100 ----- 8349729 | 2 3-4 4 | G18W, G26CW G18W, GA18, G22W, G22CU G22CU, G22CW, GT22CU, GT22CW |
| | Cab Seat Assembly - Fold Down Removable Back Rest, No Arm Rest, Pedestal Mtd. | 8486734 | 5 | G26CW |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|-------------------|---|-------------|----------|---|
| D2420-E | Cab Seats (Continued) Cab Seat Assembly - Removable Back Rest, No Arm Rest, Pedestal Mounted | 8413204 | 6-7 | JT22CW |
| C2425-E | Cab Access Doors Cab Access Door Assembly | ---- | 1-2 | G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C, G26CU,G26CW |
| | Cab Access Door Assembly | ---- | 3-4 | G22CU,G22CW,GT22CU, GT22CW,GT26CU-2, GT26CW-2 |
| | Cab Access Door Assembly | ---- | 5-6 | GT26CW |
| | Access Door Keyed Lock Body Assembly | ---- | 7 | G18U,G18W,GA18,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,G26CU, G26CW,GT26CW,GT26CU-2, GT26CW-2 |
| B2428-E | Electric Water Cooler - Drinking Water Cooler Assembly | 8205870 | 1-2 | } G18W,G22W,GT22CW,GT26CU-2 |
| | Water Cooler Compressor | 8184413 | 3 | |
| | Water Cooler Motor Assembly | 8260381 | 4 | |
| B2453-E | Pilots Front or Rear Road Pilots | ---- | 1 | G18U,G26CW,GT26CW,GT26CW-2 |
| | Front or Rear Road Pilots | ---- | 2 | G18U,GL18M,G22W,G22CU, G22CW,GL22C,GT22CW, G26CU,G26CW,GT26CW, GT26CW-2 |
| | Front or Rear Road Pilots | ---- | 3 | G18U,G22CU |
| | Front or Rear Road Pilot With Center Pilot Application | ---- | 4 | G18U,G22CW,G26CU,GT26CW |
| 2500 | GROUP - CARBODY | | | |
| B2501-E | Carbody Hood Doors, Manifold, Turbo Hatch, Exhaust Stack, Battery Box Doors, End Side Steps, Switchman's End Ladder Steps, Walkway Light and Underframe Jacking Pads | ---- | 1-4 | GT26CW |
| | Hood Doors, Manifold and Turbo Hatch, Exhaust Stack, Battery Box Doors, Grab Irons, End Side Steps, Underframe Jacking Pads, Flag and Marker Light Brackets | ---- | 5-8 | GT26CW-2 |
| | Hood Doors, Engine Filter Hatch, Manifold Cover Sheet, Handholds, Grab Irons, and End Side Steps | ---- | 9-11 | G22CU |
| | Hood Doors, Exhaust Hatch, End Side Steps, Handholds, Flag and Marker Light Brackets | ---- | 12-15 | G26CW |
| | Hatch and Hood Access Door Latch Asy. | ---- | 16 | G22CU,G26CW,GT26CW,GT26CW-2 |
| 2600 | GROUP - HANDRAILS AND SUPPORTS | | | |
| B2605-E | Handrails and Supports Rear End Arrangement - MU Operation | ---- | 1-4 | GT26CW |
| | Rear End Arrangement - Non-MU Operation | ---- | 5-7 | GT26CW,GT26CW-2 |
| | Front and Rear End Arrangement - MU and Non-MU Operation | ---- | 8 | G18U,G22CU,G26CW, GT26CW,GT26CW-2 |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|-------------------|--|-------------|----------|---|
| B2620-E | Handrails and Supports | | | |
| | Side Handrails and Supports | ---- | 1-2 | GT26CW - Prior to late 1970 |
| | Side Handrails and Supports | ---- | 3-4 | GT26CW - Since late 1970 |
| | Side Handrails and Supports | ---- | 5-6 | GT26CW-2 |
| | Side Handrails and Supports - Underframe Mounted | ---- | 7-8 | G22CU |
| | Side Handrails and Supports | ---- | 9-10 | G26CW |
| 2700 | GROUP - COUPLER AND DRAFT GEAR | | | |
| B2711-E | Coupler and Draft Gear | | | |
| | IX M6 Automatic Coupler, Draft Gear and Uncoupler | ---- | 1 | G18U,GA18,G22CU |
| | Type AP Coupler, Draft Gear and Uncoupler - Non-Alignment Control | ---- | 2-3 | G18U,G18W |
| | Type F Coupler Draft Gear and Uncoupler - Non-Alignment Control | ---- | 4 | GT26CU-2 |
| | Type F Coupler, Draft Gear and Uncoupler - Alignment Control | ---- | 5 | G26CU |
| | Type F Coupler, Draft Gear and Uncoupler - Non-Alignment Control | ---- | 6-7 | G26CU |
| | Type E Coupler, Draft Gear and Uncoupler - Alignment Control | ---- | 8 | G22U,GT22CU |
| | Type E Coupler, Draft Gear and Uncoupler - Non-Alignment Control | ---- | 9-10 | G18U,G22W,G22CW |
| | "G" Coupler, Draft Gear, Buffer and Uncoupler - Bottom Operated | ---- | 11-12 | GT26CW |
| | "E" Coupler, Draft Gear, Buffer and Uncoupler - Bottom Mounted | ---- | 13-14 | G22W,GT26CW |
| | "3/4 Willison" Coupler, Draft Gear, Buffer and Uncoupler - Bottom Mounted | ---- | 15 | GL18M |
| | Type E Coupler, Draft Gear and Uncoupler - Non-Alignment Control | ---- | 16 | G26CU |
| | Draw Hook, Draft Gear and Buffer | ---- | 17-18 | G22W,G22CU,G26CU,G26CW,GT26CW,GT26CW-2 |
| | Draw Hook, Draft Gear and Buffer | ---- | 19-20 | GT22CW,G26CW |
| | Draw Hook, Draft Gear and Buffer | ---- | 21 | G22W |
| | Top Operated "AP" Coupler | ---- | 22 | G18U,G18W,GA18,G22U,GT26CU-2 |
| | Type "E" and "F" Coupler - Alignment and Non-Alignment Control - Bottom Operated | ---- | 23-24 | G18U,G22W,G22CU,GL22C,GT22CU,G26CU,G26CW,GT26CW |
| | "G" Coupler - Bottom Operated | ---- | 25 | G18W,GT26CW |
| | "E" Coupler - Bottom Operated | ---- | 26 | GT26CW |
| | "E" Coupler - Bottom Operated | ---- | 27 | G26CU |
| | Draft Gear Assembly | ---- | 28-29 | G18U,G18W,GA18,G22U,G22W,GL22C,G26CU,G26CW,GT26CW |
| | Draft Gear Assembly | ---- | 30 | G22CU,GT22CU,GT26CU-2 |
| | NC-390 Draft Gear Assembly | 8420236 | 31 | G26CU |
| | Uncoupling Arrangement - "AP" and "E" Coupler | ---- | 32 | G18U,G18W,GA18,G22U,G22W,G22CU,GL22C,GT22CU,G26CW,GT26CW,GT26CU-2 |
| | Uncoupling Arrangement - "G" Coupling Coupler Carrier | ---- | 33 | G18W,GT26CW |
| | | ---- | 34 | G18U,G18W,GA18,G22U,G22W,G22CU,GL22C,GT22CU,G26CW,GT26CW |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|-------------------|--|-------------|----------|---|
| 2900 | GROUP - HORN AND BELL | | | |
| A2940-E | Horn | | | |
| | Air Horn (Leslie) | ---- | 1-3 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CW-2 |
| | Air Horn (Nathan) | ---- | 4 | GT26CU-2 |
| | Air Horn Operating Valve | ---- | 5-6 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 |
| | Air Horn Operating Valve | 8307151 | 7 | G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW, GL22C,GT22CW,GT26CW-2 |
| | Solenoid Actuated Air Horn Operating Valve | ---- | 8 | G22W,G26CW,GT26CW |
| A2945-E | Bell | | | |
| | Bell and Bell Ringer Mounting | ---- | 1 | G18U,G18W,GA18,G22U,G22W G22CU,G22CW,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2 |
| | Internal Bell Ringer and Bell Operating Valve | ---- | 2 | |
| 3100 | GROUP - DYNAMIC BRAKE EQUIPMENT | | | |
| A3110-E | Dynamic Brake Hatch Equipment | | | |
| | 600 Amperes | ---- | 1-2 | GA18 |
| | 370 Amperes | ---- | 3-4 | G18U |
| | 370 Amperes | ---- | 5-6 | G22CU,GL22C,G26CU |
| | 600 Amperes | ---- | 7-8 | G22W |
| | 370 and 600 Amperes | ---- | 9-10 | GT22CU,GT26CW,GT26CU-2, GT26CW-2 |
| | 600 Amperes | ---- | 11-12 | G22CW,G26CW |
| 3200 | GROUP - ELECTRICAL CONTROL CABINETS | | | |
| D3239-E | Accessory Control Cabinet | | | |
| | Cooling Fan Control Cabinet | 9312973 | 1-2 | JT22CW |
| | Cooling Fan Control Cabinet | 9329636 | 3-4 | GL18M |
| | Cooling Fan Control Cabinet | ---- | 5-7 | GT22HW,JT22CW-2 |
| | Cooling Fans, Compressor and Shutter Control A.C. Cabinets | ---- | 8-10 | GT22CU,GT22CW,GT26CW, GT26CU-2,GT26CW-2 |
| | Sanding, Shutter and Clutch Panel | 8383865 | 11 | G22CU,GL22C,G26CW |
| | Accessory Junction Box Equipment | ---- | 12 | G22W,G22CU,GL22C, G26CU,G26CW |
| D3243-E | Electrical Control Cabinet | | | |
| | Electrical Control Cabinet Assemblies | ---- | 1-5 | G18U,G18W,GA18,G22W G22CW,G26CW |
| | Electrical Control Cabinet Assemblies | ---- | 6-8 | G18U,G18W,G22U,G22CU, GL22C,G26CU |
| | Electrical Control Cabinet Frame Assembly | ---- | 9-13 | G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C, G26CU,G26CW |
| | Main Control Panel Assemblies | ---- | 14-16 | |
| | Engine Control Panel Assemblies | ---- | 17-18 | |
| | Wheel Slip Panel Assemblies | ---- | 19 | |
| | Resistor Panel Assemblies | ---- | 20-21 | |
| | Rectifier Panel Assemblies | ---- | 22-23 | |
| | Circuit Breaker Panel Assembly | 9325827 | 24 | G22W |
| | DBBF - Dynamic Brake/Battery Field Control Assembly | ---- | 25-27 | G18U,G22CU,G22CW,GL22C |
| | Voltage Limit Panel Assembly | 8431594 | 28 | G22U,G22CU |

TABLE OF CONTENTS

| Parts List Number | Subject | Part Number | Page No. | Locomotive Application |
|-------------------|---|-------------|----------|---|
| C3244-E | Electrical Control Cabinet | | | |
| | Electrical Control Cabinet Assembly | ---- | 1-7 | GT22CU,GT22CW,GT26CW, GT26CU-2,GT26CW-2 |
| | Electrical Control Cabinet Assembly | ---- | 8-20 | GL18M,GT22HW,JT22CW, JT22CW-2,GT26CW-2 |
| | Electrical Cabinet Frame Assembly | 8472065 | 21-22 | GT22CU,GT22CW,GT26CU-2, GT26CW-2 |
| | Electrical Cabinet Frame Assembly | ---- | 23-24 | GT26CW |
| | Electrical Cabinet Frame Assembly | 9325524 | 25-26 | GL18M |
| | Electrical Cabinet Frame Assembly | 9312233 | 27-28 | JT22CW |
| | Electrical Cabinet Frame Assembly | 9501002 | 29-30 | JT22CW-2 |
| | Electrical Cabinet Frame Assembly | ---- | 31-32 | GT22HW,GT26CW-2 |
| | Main Control Panel Assembly | ---- | 33-40 | GL18M,GT22CU,GT22CW, GT22HW,JT22CW,JT22CW-2, GT26CW,GT26CU-2,GT26CW-2 |
| | Rate Control Panel Assembly | 8373273 | 41 | GT22CU,GT22CW,GT26CW, GT26CU-2,GT26CW-2 |
| | Excitation Control Panel Assembly | ---- | 42 | GT26CW |
| | Sensor By-Pass Panel Assembly | 8377230 | 43 | GT22CU,GT22CW,GT26CW, |
| | Throttle Response Panel Assembly | ---- | 44 | GT26CU-2,GT26CW-2 |
| | Dynamic Brake and Brake Warning Panel Assemblies | ---- | 45 | GT26CW |
| | Engine Control Panel Assembly | ---- | 46-48 | GL18M,GT22CU,GT22CW, |
| | Circuit Breaker Panel Assembly | ---- | 49-51 | GT22HW,JT22CW,JT22CW-2, GT26CW,GT26CU-2,GT26CW-2 |
| | Circuit Breaker Compartment Assembly | ---- | 52 | GT22HW,JT22CW-2,GT26CW-2 |
| | Fuse and Switch Panel Assembly | ---- | 53 | GL18M,GT22CU,GT22CW, JT22CW,GT26CW,GT26CU-2, GT26CW-2 |
| | Fuse and Switch Compartment Assembly | ---- | 54 | GT22HW,JT22CW-2,GT26CW-2 |
| | Head End Control Panel Assembly | 9516346 | 55 | GT22HW |
| | Resistor Panel Assembly | ---- | 56-57 | GT22CU,GT22CW,GT26CU-2, GT26CW-2 |
| | Resistor Panel Assembly | ---- | 58 | GT26CW |
| | Resistor Panel Assembly | ---- | 59-60 | GL18M,JT22CW,JT22CW-2 |
| | Instant Detection and Correction (IDAC) Wheel Slip Panel Assembly | ---- | 61-62 | GT22CU,GT22CW,GT26CW GT26CU-2,GT26CW-2 |
| | Transition Sequence Test Panel Assembly | ---- | 63 | GT22CU,GT22CW,,GT26CW, GT26CU-2,GT26CW-2 |
| | AR10 Generator Diode Protection Panel Assembly | ---- | 64 | GT26CW |
| A3246-E | Electrical Cabinet | | | |
| | Head End Power Aux. Electrical Cabinet | 9515887 | 1-2 | GT22HW |
| C3247-E | Electrical Control Cabinet Filter Equipment | | | |
| | Air Filter Application | ---- | 1 | G22W,JT22CW,JT22CW-2 |
| | Air Filter Application | ---- | 2 | GT22CU,GT22CW,GT26CW |
| | Air Filter Application | ---- | 3 | GL18M |
| A3249-E | Shunt Panel | | | |
| | Generator and Ammeter Shunt Panel Asy. | ---- | 1 | G18U,G18W,GA18,G22U, G22W,G22CU,G22CW, GL22C,GT22CU,GT22CW, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2 |
| B3286-E | Wheel Slip Control | | | |
| | Wheel Slip Control Panel Assembly | 8397747 | 1-2 | GT22CU,GT22CW,GT26CW, GT26CU-2,GT26CW-2 |
| | Bridge Support Assembly | 8398416 | 3 | |
| | Control and Auxiliary Control Board Assemblies | ---- | 4 | |
| | | | | |