

REPLACEMENT PARTS CATALOG NO. 341



VOLUME TWO

G18U	G22CU	JT22CW
G18W	G22CW	JT22CW-2
GA18	GL22C	G26CU
GL18M	GL22MC	G26CW
G22U	GT22CU	GT26CW
G22W	GT22CW	GT26CU-2
G22WAC	GT22LC	GT26CW-2

LOCOMOTIVES



Electro-Motive Division
La Grange, Illinois, U.S.A., 60525

REPLACEMENT PARTS CATALOG NO. 341

TABLE OF CONTENTS

VOLUME TWO

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
3300	GROUP - MAIN GENERATOR - ALTERNATOR			
C3310-E	Main Generator			
	Main Generator Asy.	----	1-3	} G18U,G18W,GA18,G22W, G22CU,G22CW,GL22C
	Stator Asy.	D25L,D25-L2, ----	4-5	
	End Housing Asy.	D25P,D25R, 8136083	6	
	Brush Holder Asy.	D25S 8124419	7	
	Air Box Asy.	----	8-9	
	Generator Shroud Application	----	10	
C3311-E	Main Generator			
	Main Generator Asy.	8386335	1-4	} G22U,G22W,G26CU,G26CW
	Stator Asy.	8385255	5-7	
	End Housing Asy.	8386405	8	
	Brush Holder Asy.	8331071	9	
A3316-E	AR6 Alternator			
	Alternator Asy.	----	1-5	} GL18M,JT22CW-2,GT26CW-2
	Stator Asy.	9326116	6-7	
	D14 Alternator Stator Asy.	8346621	8	
	Alternator Circuit Filter	AR6, ----	9	
	Rectifier Bank Asy.	AR6A, 9324797	10-11	
	Rotor Asy.	AR6D3 ----	12-13	
	Collector Ring Asy.	----	14	
	Air Box Asy.	----	15-16	
B3317-E	AR10 Alternator			
	AR10 Alternator Reference List	----	1	} G22C,G22CU,GL22C,GT22CU, GT22CW,JT22CW,G26C, GL26C,GL26CU-2,GT26C, GT26CW,GT26CU-2,GT26CW-2, JT26C,JT26CW
	Alternator Asy.	----	1-7	
	Stator Asy.	----	8-9	
	D14 Alternator Stator Asy.	----	10	
	Alternator Circuit Filter	----	11	
	Rectifier Bank Asy.	----	12-13	
	Rotor Asy.	----	14-16	
	Collector Ring Asy.	----	17	
	Air Box Asy.	----	18-20	
3600	GROUP - BLOWERS AND DRIVES			
C3610-E	Blower Assembly			
	Blower Asy., Drive, Guard and Air Duct For Main Generator, Alternator and Traction Motors	----	1-3	} G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CW,G26CU,G26CW
	Auxiliary Generator Blower Asy. No. 1 and No. 2 End	----	4-5	
	Blower Asy., Drive, Guard and Air Duct For Main Generator, Alternator and Traction Motors	----	6-7	} GT22CU,GT22CW,JT22CW,JT22CW-2, GT26CW,GT26CW-2
	Auxiliary Generator Blower Asy. No. 1 and No. 2 End	----	8-9	
	No. 2 Traction Motor Blower Asy.	9313496	10	JT22CW
C3650-E	Flexible Coupling Drive Asy. Engine to Auxiliary Generator Drive Asy.	----	1	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
3700 GROUP - AUXILIARY GENERATOR				
C3705-E	D.C. Auxiliary Generator D.C. Auxiliary Generator Reference List -----		1	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, G26CU,G26CW,GT26CW,GT26CU-2, GT26CW-2
	Auxiliary Generator Asy. } Frame and Coil Asy. } Commutator End Frame Asy. } 10 KW Armature Asy. }	----- ----- ----- -----	1 2 3 4-5	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,G26CU, G26CW,GT26CU-2
	Brush Holder Asy. - 10 and 18 KW Auxiliary Generators	-----	6	
	Auxiliary Generator Asy. } Frame and Coil Asy. } Commutator End Frame Asy. } 18 KW Armature Asy. }	----- 5337317 ----- -----	7 8 9 10	GT26CW,GT26CU-2,GT26CW-2
	Auxiliary Generator Asy. } Frame and Coil Asy. } Commutator End Frame Asy. } 24 KW Brush Holder Asy. } Armature Asy. }	3195473 3199387 ----- 3199361 -----	11 12 13 14 15	
A3707-E	A.C. Auxiliary Generator 18 KW A.C. Auxiliary Generator Rotating Field and Armature Asy.	----- -----	1-2 3-4	GL22C,GT22HW,JT22CW, JT22CW-2,GL26CU,JT26CW
A3709-E	Head End Power Alternator 375 KW Head End Power Alternator	9510715	1-2	GT22HW
3800 GROUP - TRACTION MOTOR MOUNTING				
B3815-E	Traction Motor Mounting D75MC and D79M Traction Motor Mtg.	-----	1-2	GA18
A3898-E	Traction Motor Gear Reference List Axle Gear, Pinions and Lubricants	-----	1	G18U,G18W,GL18M,G22U,G22W, G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22, JT22CW, JT22CW-2,G26CU,G26CW, GL26C,GT26C,GT26CW, GT26CU-2,GT26CW-2
3900 GROUP - TRACTION MOTOR				
B3901-E	Traction Motor D75MC and D79MC Traction Motor Stator Asy. Armature Asy.	----- 8336950 -----	1-2 3-5 6	} GA18
D3904-E	Traction Motor D29 and D29CC Traction Motor Stator Asy. Brush Holder Asy.	----- ----- -----	1-2 3-6 7	
C3913-E	Traction Motor D75B,D77B,D77B1 and D77C Traction Motor Stator Asy. Armature Asy. Brush Holder Asy.	----- ----- ----- -----	1-4 5-9 10 11	G18W,G22W,G22CW,GT22CW, GT22HW,JT22CW,JT22CW-2, G26CW,GT26CW,GT26CW-2, JT26CW
VOLUME TWO			2	AUGUST, 1980

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
C3913-E	Traction Motor (Continued) Quick Access Commutator Covers Axle Shield and Grounding Bar Asy.	-----	12	G18W,G22W,G22CW,GT22CW, GT22HW,JT22CW,JT22CW-2 G26CW,GT26CW,GT26CW-2, JT26CW
		-----	13	
C3915-E	Lubricator Wick Asy. Lubricator Wick Asy.	8277771	1	G18W,G22W,G22CW,GT22CW, JT22CW,JT22CW-2,G26CW, GT26CW,GT26CW-2 G18U,GL18M,G22U,G22CU, GL22C,GT22CU,G26CU,GT26CU-2
	Lubricator Wick Asy.	-----	2	
C3926-E	Traction Motor Axle Dust Guard Axle Dust Guard Asy.	-----	1	G18U,G18W,G22U,G22W,G22CU, G22CW,GL22C,GT22CU, GT22CW,JT22CW,JT22CW-2, G26CU,G26CW,GT26C, GT26CW,GT26CU-2,GT26CW-2, JT26C G18U,G22U,G22CU,GL22C
	Axle Dust Guard Asy.	-----	2	
C3929-E	Traction Motor Support Bearing	-----	1	G18U,G18W,G22U,G22W,G22CU, G22CW,GL22C,GT22CU, GT22CW,JT22CW,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
C3930-E	Traction Motor Gear Case D75B,D77B,D77B1 and D77C Traction Motor Gear Case Reference Chart Gear Case - Upper Half Gear Case - Lower Half	-----	1	G18W,G22W,G22CW,GT22CW, JT22CW,JT22CW-2,G26CW, GT26CW,GT26CW-2
		8301948	2	
		-----	3-4	
C3931-E	Traction Motor Gear Case D29 and D29C Traction Motor Gear Case Reference Chart Gear Case - Upper Half Gear Case - Lower Half	-----	1	G18U,GL18M,G22U,G22CU,GL22C, GT26CU,GT26CU-2
		-----	2	
		-----	3	
4000	GROUP - CIRCUIT MODULES			
C4001-E	Circuit Module Assemblies Circuit Module Index Test Panel Assemblies Circuit Module Assemblies	-----	1-2	GL18M,GL22C,JT22CW, JT22CW-2,GT26CU-2,GT26CW-2
		-----	3	
		-----	4-73	

A4002-E	Circuit Module Enclosure Asy. Enclosure Asy. - GV12,GX2,PF25 Mod. 8485046		1	GT26CU-2
4100	GROUP - CAB HEATER, ENGINE COOLING FAN, AIR DISCHARGE MOTOR, GRID BLOWER MOTOR, FUEL PUMP AND MOTOR			
D4110-E	Fuel Pump and Motor Fuel Pump and Motor Asy. Fuel Pump Motor Asy. Fuel Pump Asy.	-----	1	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
		5540387	2-3	
		-----	4-5	

D4122-E	Cab Heater Cab Heater Reference Chart Cab Heater Asy. and Appl. Defroster Fan Asy. and Appl., Air Circulating Fan (See Chart on Page 1)	-----	1	G18U,G18W,GA18,GL18M,G22W, G22CU,G22CW,GL22C, GT22CU,GT22HW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CW-2
		-----	2-19	

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
C4123-E	Engine Cooling Fan Engine Cooling Fan Asy.	----	1-2	GL18M, GL22C, GL22CU, GT22CU, GT22CW, JT22CW, JT22CW-2, G26CU, G26CW, GL26CU, GT26CW, GT26CU-2, GT26CW-2
B4126-E	Air Discharge Motor Inertial Air Discharge Motor	5540161	1-2	GT22CU, GT22CW, GT26CW, GT26CU-2, GT26CW-2
D4127-E	Fan and Motor Grid Blower Fan and Motor Asy.	----	1-10	G18U, GA18, G22W, G22CU, G22CW, GL22C, GT22CU, G26CU, GT26CW, GT26CU-2, GT26CW-2, JT26C
4200	GROUP - OVERNIGHT HEATER EQUIPMENT			
C4250-E	Overnight Heater Equipment			
	Electric Immersion Heater and Water Circulating Pump Conduit	----	1-2	G18U, G18W
	Electric Immersion Heater and Water Circulating Pump Conduit	----	3-4	G22CW
	Electric Immersion Heater and Water Circulating Pump Conduit	----	5-7	GT22CU
	Electric Immersion Heater and Water Circulating Pump Conduit	----	8-9	GT26CW
	Electric Immersion Heater and Water Circulating Pump Piping	----	10-12	G18U, G18W
	Electric Immersion Heater and Water Circulating Pump Piping	----	13-14	G22CW
	Electric Immersion Heater and Water Circulating Pump Piping	----	15-16	GT22CU
	Electric Immersion Heater and Water Circulating Pump Piping	----	17-18	GT26CW
	Electric Immersion Heater and Water Circulating Pump	----	19-20	G18U, G18W, G22CW, GT22CU, JT22CW, GT26CW
4300	GROUP - CONTROL CONSOLE			
D4322-E	Control Console Single Operator's Station	----	1-5	G18U, G18W, GA18, G22U, G22W, G22CU, G22CW, GL22C, G26CU, G26CW
B4330-E	Control Console Dual Operator's Station	----	1-5	G18U, G26CU, G26CW
A4331-E	Control Console Single Control Stand	----	1-14	GL18M, GT22CU, GT22CW, GT22HW, G26CU, GT26CW, GT26CU-2, GT26CW-2
C4334-E	Controller Mechanism			
	Controller Mechanism Index	----	1	G18U, G18W, GA18, GL18M, G22U, G22W, G22CU, G22CW, GL22C, GT22CU, GT22CW, GT22HW, JT22CW, JT22CW-2, G26CU, G26CW, GT26CW, GT26CU-2, GT26CW-2
	Controller Mechanism Assemblies	----	2-20	
	Mechanism Interlock Asy.	----	21-22	
	Mechanism Handle Assemblies	----	23-24	

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
4500	GROUP - REGULATORS			
C4508-E	Regulator			
	Dynamic Brake Limiting Regulator	8305972	1	} G18U,GA18,G22W,GL22C
	Dynamic Brake Limiting Reg. Resis. Chart	----	2	
	Dynamic Brake Limiting Regulator	8467161	3	G18U,GA18,G22W,G22CU,GL22C, G26CU,G26CW
A4522-E	Load Regulator			
	Vane Type With Face Plate Rheostat	----	1-3	G18U,G18W,GA18,GL18M,G22U, G22CU,G22CW,GL22C,GL22CU-2, GT22CU,GT22CW,GT22HW,JT22CW, JT22CW-2,G26CW,GL26C, GL26CU/AC-2,GT26C,GT26CU-2, GT26CW,GT26CW-2,JT26C
	Load Regulator Rheostat	----	4-5	G18U,G18W,GA18,G22U,G22CU, G22CW,GL22C,G26CW
	Vane Type With Internal Check Valve	8117013	6	G22CU,G22CW,G26CU,G26CW
	Vane Type With Internal Check Valve	8285903	7	G18U,G18W
	Vane Motor Assembly	----	8-9	G18U,G18W,G22CU,G22CW,G26CU, G26CW
C4523-E	Regulator			
B 4523-E	Static Voltage Regulator	8330790	1-2	G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C,G26CU, G26CW
	Static Voltage Regulator	8351980	3-4	GT22CU,GT22CW,GT26CW, GT26CU-2,GT26CW-2
	Circuit Board Asy.	8446285	5	G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C,GT22CU, GT22CW,G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
4700	GROUP - MAGNET VALVES			
C4715-E	Magnet Valves			
	Magnet Valve Index	----	1	} G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
	Magnet Valve Assemblies	----	2-10	
4900	GROUP - CIRCUIT BREAKERS, FUSES, MANUAL SWITCHES AND EMERGENCY FUEL CUT - OFF SWITCH			
B4923-E	Circuit Breakers and Fuses			
	Circuit Breakers	----	1-2	} G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
	Fuses	----	3	
	Fuse Holders	----	4	
B4924-E	Manual Switches			
	Toggle, Tumbler and Foot Switches	----	1	} G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
	Push Button, Knife, Slide and Roller Button Switches	----	2	
	Rotary Snap Switches	----	3-4	
	Traction Motor Cut-Out Switches	----	5	
A4927-E	Emergency Fuel Cut-Off Switch			
	Emergency Fuel Cut-Off Switch	----	1-2	G18U,G18W,G22W

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
5100	GROUP - AUXILIARY INTERLOCKS			
A5177-E	Auxiliary Interlock Assemblies	----	1	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
5300 5400 }	GROUP - RELAYS, CONTACTORS AND MAGNETIC SWITCHES			
B5345-E	Relay Shunt Field Transfer Relay	8188947	1-2	G18U,GA18,G22U,G22CU,GL22C, G26CU,G26CW
	Traction Motor Lockout Relay	8155259	3-4	G26CW
D5352-E	Time Delay Relay Time Delay Relay Pneumatic Timer Unit	---- ----	1-2 3	G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C,GT22CU, GT22CW,GT22HW,JT22CW,G26CU, G26CW,GT26CU-2,GT26CW-2
A5353-E	Wheel Slip Relay Wheel Slip Relay	----	1-2	G18U,G18W,G22W,G22CU,GL22C, GT22CU,GT22CW,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
D5377-E	Contactor Engine Purge Control, Generator Field Decay, Generator Start and Train Lighting Mainline Contactors	----	1-2	G18U,G18W,GA18,GL18M,G22U,G22W, G22CU,G22CW,GL22C,GT22CU, GT22CW,JT22CW,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
A5381-E	Contactor Engine Purge Control	8473366	1	JT22CW
B5383-E	Contactor Traction Motor Field Skunting	----	1-3	G18U,GA18,G22U,G22W,G22CU, GL22C,G26CW
C5394-E	Wheel Slip Relay Wheel Slip Relay Wheel Slip Relay	8222035 8454412	1 2	GT26CW G22CU,GT22CU,GT22CW,G26CW, GT26CW,GT26CU-2,GT26CW-2
A5401-E	Contactor Generator and Battery Field Auxiliary Contactor	----	1-2	GL18M,G22CU,GT22CU,GT22CW, GT22HW,JT22CW,JT22CW-2, GT26CW,GT26CW-2
B5402-E	Contactor Cooling Fan Control and Train Lighting System Contactor	----	1-2	GL18M,G22W,G22CU,GT22CW, JT22CW,JT22CW-2,GT26CW, GT26CU-2
C5405-E	Contactor Brake, Parallel and Series Power Contactor	----	1-3	G18U,G18W,GA18,G22U,G22W,G22CU, G22CW,GL22C,G26CU,G26CW

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
A5406-E	Contactors Head End Power Contactors	8459697	1-2	GT22HW
B5408-E	Contactors Traction Motor Field Shunting	----	1-2	G18U,G22U,G22W,G22CU,G22CW, GL22C,GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW,G26CU-2
B5424-E	Magnetic Power Contactors Single Pole Single Throw - 1000 Amps. Single Pole Single Throw - 1000 Amps.	----	1-3	GT26CW
		----	4-5	GL18M,GT22CU,GT22CW,GT22HW, JT22CW,JT22CW-2,GT26CW, GT26CU-2,GT26CW-2
C5426-E	Magnetic Switch Asy. Two Pole Double Throw - 1000 Amps. Two Pole Double Throw - 1000 Amps.	----	1-3	G18U,G18W,GA18,G22W,G22CU, G22CW,GL22C,G26CW,GT26CW
		----	4-6	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
C5432-E	Contactors Battery Field, Shunt Field, Generator Start, Starting Auxiliary, "A" and "C" Valve Relay, Generator Field Relay and Load Regulator Contactors	----	1-2	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
C5440-E	General Purpose Relay General Purpose Relays General Purpose Relays - MFP	----	1-4	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, G22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
		----	5	GT22CU,GT22CW,GT26CW, GT26CU-2,GT26CW-2
C5450-E	Transition Relays Transition Relays	----	1-3	G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C,GT22CU, GT22CW,G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
B5451-E	Brake Warning Relay Brake Warning Relay	8277235	1	G18U,GA18,G22W,G22CU,GL22C, GT22CU,GT22CW,G26CU,GT26CW
B5452-E	Ground and Transition Relays Ground and Transition Relays	----	1-3	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
A5496-E	Micropositioner Relay Micropositioner Relays	----	1	G18U,GA18,G22U,G22W,G22CU, GL22C,GT22CU,GT22CW,G26CU, GT26CW,GT26CU-2,GT26CW-2
B5499-E	Relay List No Voltage Relay - NVR	8421231	1	GL18M,GT22CU,GT22CW,GT22HW, JT22CW,JT22CW-2,GT26CW, GT26CU-2,GT26CW-2
	Immersion Heater - IHR	9098091	1	JT22CW
	Turbo Lube Pump Time Delay - TLTD	8349285	1	GT22CU,GT22CW,GT22HW,JT22CW, JT22CW-2
5500	GROUP - CONTROL SWITCHES			
A5524-E	Control Switches Pressure Switches	----	1-2	G18U,G18W,GA18,G22W,G22CU, GL22C,G26CU,G26CW,GT26CW, GT26CW-2
	Pressure Switches	----	3	G18U,G18W,GA18,G22W,G22CU, GL22C,GT22CW,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
	Temperature Control Switches	----	4	G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C,GT22CU, GT22CW,G26CU,G26CW,GT26CW, GT26CJ-2,GT26CW-2
	Air Temperature Switch	8298987	5-7	G18U
5700	GROUP - CONTROL JUMPERS AND RECEPTACLES			
B5711-E	Control Jumpers Power Plant and Train Lighting Control Jumper Asy.	8195548	1	G18U,G18W,GA18,G22W, G22CU,GL22C,G26CU, G26CW,GT26CW
	Jumper Receptacle Asy.	8179678	2	
	Steam Generator Jumper and Receptacle, Auxiliary Generator, Circuit Breaker and Battery Charging Rectifier Cables	----	3-4	GT26CW,GT26CW-2
B5713-E	Receptacles and Plugs Receptacles and Plugs	----	1-2	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
	Governor Connectors and Receptacles	----	3	
5900	GROUP - LIGHT ASSEMBLIES			
B5914-E	Lights Cab Ceiling Light Assemblies	----	1	G22W G18U,G18W,Gww†,GL22C,G26CW GT26CW,GT26CW-2 GT26CW-2 G26CW G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
	Adjustable Cab Ceiling Light Asy.	8307888	2	
	Classification Light Asy.	8355678	3	
	Classification Light Asy.	8356104	4	
	Classification Light Asy.	8411537	5	
	Mars Oscillating Signal Light	----	6	
	Dual Sealed Beam Headlights	----	7	
	Running Lights	----	8	G18U
	Ground Light Asy.	----	9	G22W
	Ground Light Asy.	----	10	GT26CW-2

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
B5914-E	Lights (Continued)			
	Indicator Lights	----	11	} G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2 GT26CW-2
	Engine Room Indicator, Number Box and Portable Lights	----	12	
Number and Headlight Housing Asy's	----	13		
6700	GROUP - TERMINAL BOARDS			
B6703-E	Terminal Boards	----	1	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
6900	GROUP - RESISTORS, RHEOSTATS AND RECTIFIERS			
A6903-E	Rectifiers			
	Battery Charging Rectifier Asy's	----	1	} G18U,G18W,GA18,G22W,G22CU, GL22C,G26CW
	Battery Charging Rectifier Asy's	----	2-3	
	Battery Charging Rectifier and Resistor Asy.	9317803	4	GT26CW-2
	Battery Charging Rectifier and Resistor Asy.	8479400	5	G22W,GL22C,GT22HW,JT22CW, JT22CW-2
	SCR - Silicon Controller Exciter Bridge Rectifier Asy.	8451653	6-8	GL18M,GT22CU,GT22CW,GT22HW, JT22CW,JT22CW-2,GT26CU,GT26CW, GT26CU-2,GT26CW-2
	Head End Generator Static Exciter Rectifier Asy.	9515262	9	GT22HW
Control Rectifiers	----	10	G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW,JT22CW-2, G26CU,G26CW,GT26CW,GT26CU-2, GT26CW-2	
B6914-E	Resistors and Rheostats Resistors and Rheostats	----	1-7	G18U,G18W,GA18,G22W,G22CU, GL22C,G26CW
9100	GROUP - GENERAL LIST - ELECTRICAL			
B9105-E	Capacitors Capacitors and Mounting Brackets	----	1	} G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
P9106	Wire, Cable and Cable Cleats			
	Wire, Cable, Color Coded Cable, Plastic Tubing, Wire Marker Sets and Electrical Tape Reference List	----	1	
	Wire and Cable General List	----	2-5	
	Governor Cable, Insulating Tubing, Wire Markers and Electrical Tape	----	6	
	Rubber Cable Cleats	----	7-8	
Hardwood Cable Cleats	----	9-10		
E9111	Terminal Lugs and Connectors Terminal Lugs and Connectors	----	1-4	
	Resistors And Rheostats			

TABLE OF CONTENTS

Parts List Number	Subject	Part Number	Page No.	Locomotive Application
C9128	Cable Clamps			
	Insulated Cable Clamps	----	1	} G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW, JT22CW-2,G26CU,G26CW, GT26CW,GT26CU-2,GT26CW-2
	Self Clinching Nylon Cable Ties	----	2	
C9130-E	Storage Batteries			
	Storage Battery	----	1	} G18U,G18W,GA18,GL18M,G22U, G22W,G22CU,G22CW,GL22C, GT22CU,GT22CW,JT22CW-2, G26CU,G26CW,GT26CW, GT26CU-2,GT26CW-2
	Cables and Connectors	----	2-4	
	Battery Spacing Blocks and Retainer Angles	----	5	} G18U,G18W,GA18,G22U,G22W, G22CU,G22CW,GL22C,G26CU, G26CW,GT26CW,GT26CW-2
	Battery Box Door Assemblies	----	6-7	
D9135	Rewind Material and Kits	----	1	} G18U,G18W,GA18,GL18M,G22U,G22W, G22CU,G22CW,GL22C,GT22CU, GT22CW,JT22CW,JT22CW-2,G26CU, G26CW,GT26CW,GT26CU-2,GT26CW-2
H9136	Carbon Brushes	----	1-3	
	Numerical Index			