


ST-85 Service Tools Catalog

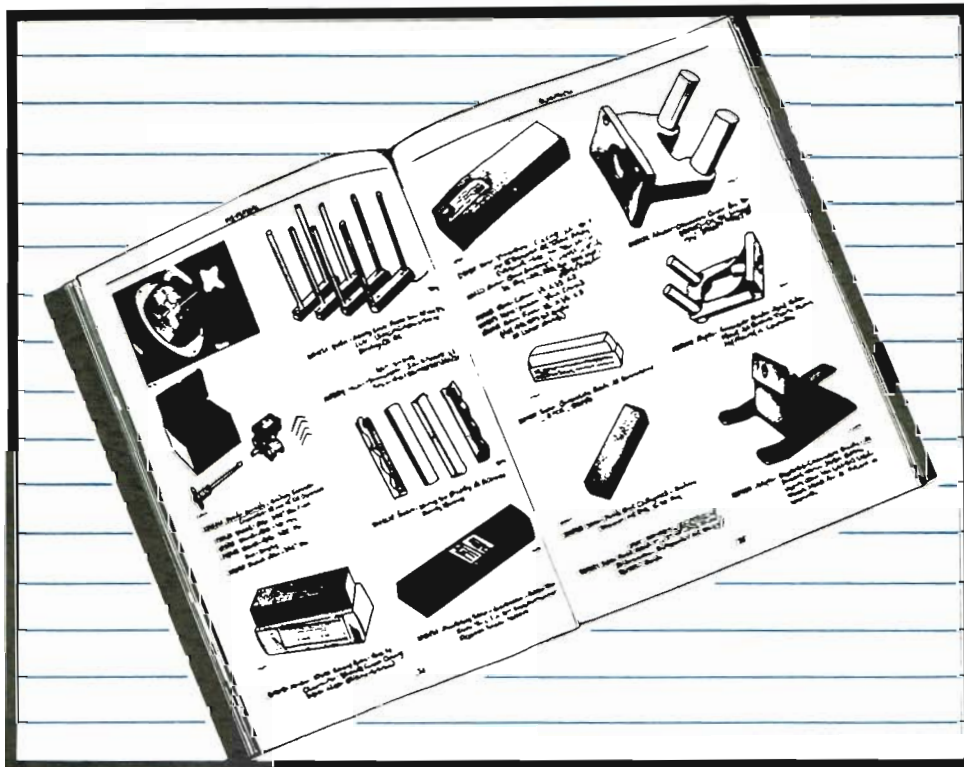


ELECTRO-MOTIVE



TOOL SUPPLY CENTERS

EMD Factory Branches and Branch Warehouses are strategically located for ease in ordering and shipment.

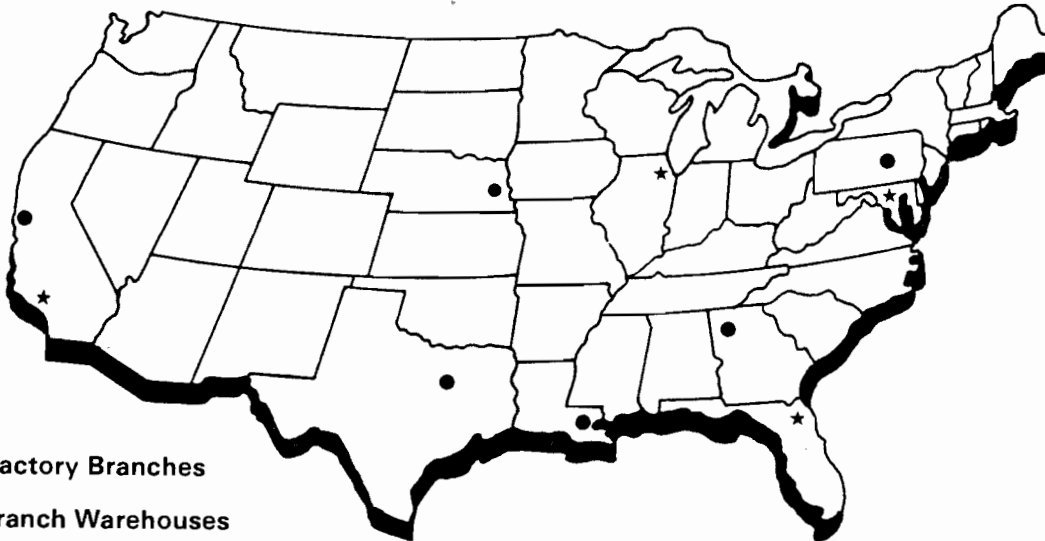

★ Factory Branches

● Branch Warehouses

★ **HALETHORPE** —
4701-09 Washington Boulevard
Halethorpe, Maryland 21227
301-242-4450

★ **JACKSONVILLE** —
P.O. Drawer "O",
3545 New Kings Rd.
Jacksonville, Florida 32209
904-765-1611

★ **LA GRANGE (HODGKINS)** —
6600 River Rd.
Hodgkins, Illinois 60525
312-387-3000

★ **COMMERCE** —
5928 South Malt Ave.
Commerce, California 90040
213-724-6940
(Warehouse) 6111 South Malt Ave.
213-724-6940

● **BEDFORD** —
Bedford Industrial Park Rd. 2
P.O. Box 647
Bedford, Pennsylvania 15522
814-623-1181

● **ATLANTA** —
790 Great Southwest Parkway
Atlanta, Georgia 30336
404-349-3300

● **FORT WORTH** —
P.O. Box 11559
2901 West Bolt Street
Fort Worth, Texas 76109
817-923-1913

● **SACRAMENTO** —
181 Main Ave.
Sacramento, CA 95838
916-920-2473

● **NEW ORLEANS** —
130 Brookhollow Esplanade
Harahan, Louisiana 70123
504-733-8144

● **OMAHA** —
4534 S. 90th Ave.
Omaha, Nebraska 68127
402-339-6926

FOREWORD

It is the intent of this catalog to provide information relating to the special tools recommended for use in servicing Electro-Motive equipment.

Service Tool Catalog ST-85 supersedes Catalog "ST-77". This number will change accordingly for subsequent issues.

The catalog is divided into six sections to facilitate tool location. Four of the sections are titled to define the general application of the tool, such as "ENGINE" or "ELECTRICAL." Sub-groupings within the section, such as "CYLINDER HEAD" further identifies the area where the tool would be found. Section 5 is a numerical listing of all the tools contained in the catalog. Section 6 is an alphabetical listing of all the tools contained in the catalog. In addition, the Section No. and Page No. are referenced showing where the tool is listed. Pages in the catalog are numbered consecutively within each section, such as "2-4" and "2-5."

Items indented under an Assembly No. are included in the assembly, but are not necessarily all of the items making up the assembly. Only those items, which are considered subject to replacement, are listed.

TABLE OF CONTENTS

	<u>PAGE</u>
<u>SECTION 1</u>	
ENGINE	
Crankcase	1-1
Power Assembly	1-12
Cylinder Head	1-14
Rod	1-23
Carrier	1-26
Piston	1-28
Cylinder Liner	1-29
Accessories	1-31
Air Intake and Exhaust	1-33
Cooling and Lubrication	1-38
Fuel	1-40
Governor	1-45
<u>SECTION 2</u>	
ELECTRICAL	2-1
<u>SECTION 3</u>	
EQUIPMENT	
Air Compressor	3-1
Truck	3-4
<u>SECTION 4</u>	
MISCELLANEOUS	4-1
<u>SECTION 5</u>	
NUMERICAL INDEX	
<u>SECTION 6</u>	
ALPHABETICAL INDEX	