


GENERAL MOTORS LOCOMOTIVES

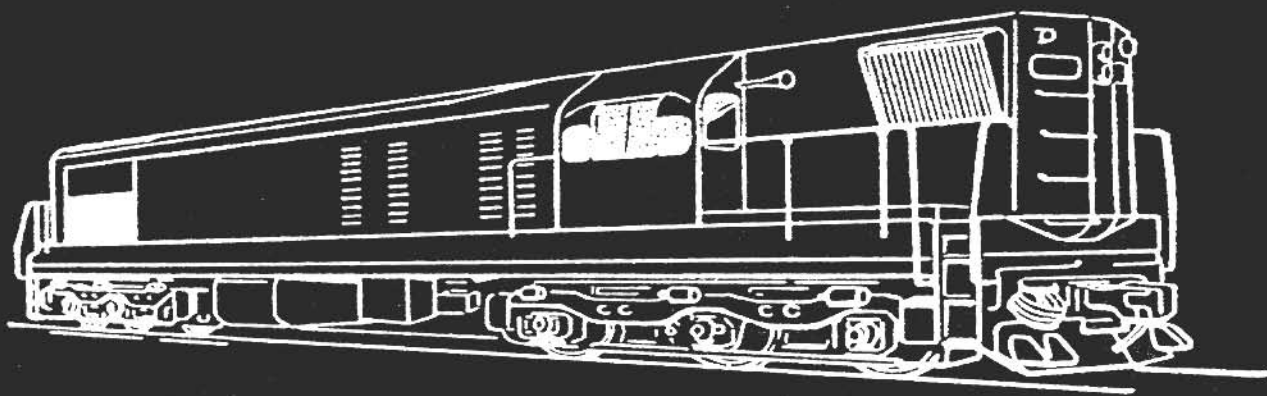

Operation

**GENERAL MOTORS CORPORATION
GENERAL MOTORS OVERSEAS OPERATIONS
NEW YORK 19, NEW YORK, U. S. A.
ELECTRO-MOTIVE DIVISION
LA GRANGE, ILL., U. S. A.**

TABLE OF CONTENTS

	Page
SECTION 1 - GENERAL DESCRIPTION	100
Introduction	100
How The Locomotive Operates	103
SECTION 2 - CAB CONTROLS	200
Introduction	200
Distribution Panel	200
Engine Control Panel	205
Locomotive Controller	210
Mechanical Interlocks On The Controller	217
Air Brake Equipment	218
Brake Equipment Positions	222
SECTION 3 - OPERATION	300
Introduction	300
Preparation For Service	300
To Start Diesel Engine	306
To Stop Engine	306
Precautions Before Moving Locomotive	307
Handling Light Locomotive	307
Coupling Locomotive Units Together	308
Coupling Locomotive To Train	309
Pumping Up Air Or Vacuum	309
Starting A Train	310
Acceleration Of A Train	312
Slowing Down Because Of A Grade	312
Braking With Power	312
Operation Over Railroad Crossing	313
Running Through Water	313
Wheel Slip Light Indications	313
Locomotive Speed Limit	314
Mixed Gear Ratio Operation	315
Dynamic Braking	316
Dynamic Brake Wheel Slide Control	318

GENERAL

	Page
SECTION 3 - OPERATION (Continued)	
Vacuum Brake Equipment	318
Multiple Unit Operation	321
Securing Locomotive For Layover	324
Towing Dead In Train	325
Freezing Weather Precautions	326
SECTION 4 - COOLING, LUBRICATING, FUEL AND AIR SYSTEMS	
	400
Cooling System	400
Lubricating Oil System	405
Fuel Oil System	408
Air System	412
SECTION 5 - ELECTRICAL EQUIPMENT	
	500
Introduction	500
Main Generator	500
Traction Motors	501
Auxiliary Generator	502
Load Regulator	502
Electrical Cabinet - Cab Side	503
Electrical Cabinet - Engineroom Side	509
SECTION 6 - ELECTRICAL SYSTEMS	
	600
Introduction	600
Tracing Schematic Wiring Diagrams	601
Fuel Pump And Starting Circuits	603
Engine Starting	604
Local Control Circuit	606
Reversing Circuit	606
Control Circuit	609
Excitation Circuit	609
Engine Speed Control Circuit	610
Transition Control System	612

GENERAL

	Page
SECTION 6 - ELECTRICAL SYSTEMS (Continued)	
Dynamic Brake Operation	615
Wheel Slip Control	617
Legend Of Electrical Equipment	618
SECTION 7 - TROUBLE SHOOTING	700
Introduction	700
General Procedure	700
Alarm Signal Lights	701
Correction Of Operating Difficulties	706
Unusual Operating Problems	710

**DIESEL-ELECTRIC
LOCOMOTIVE
OPERATING
MANUAL**

FOR

**MODELS
G12, GR12, G16
LOCOMOTIVES**



June, 1965

GENERAL MOTORS CORPORATION

GENERAL MOTORS OVERSEAS OPERATIONS

NEW YORK, NEW YORK, U.S.A.

ELECTRO-MOTIVE DIVISION

LAGRANGE, ILLINOIS, U.S.A.