


BC3 CB LOC CONT. (606)  
BC4 CONT. (606)

(510) CB LTS  
(510) CB LTS  
(510) CB LTS

810  
812  
814  
816  
818  
820  
822  
824  
826  
828  
830  
832  
834  
836  
838  
840  
842  
844  
846  
848  
850  
852  
854  
856  
858  
860  
862  
864  
866

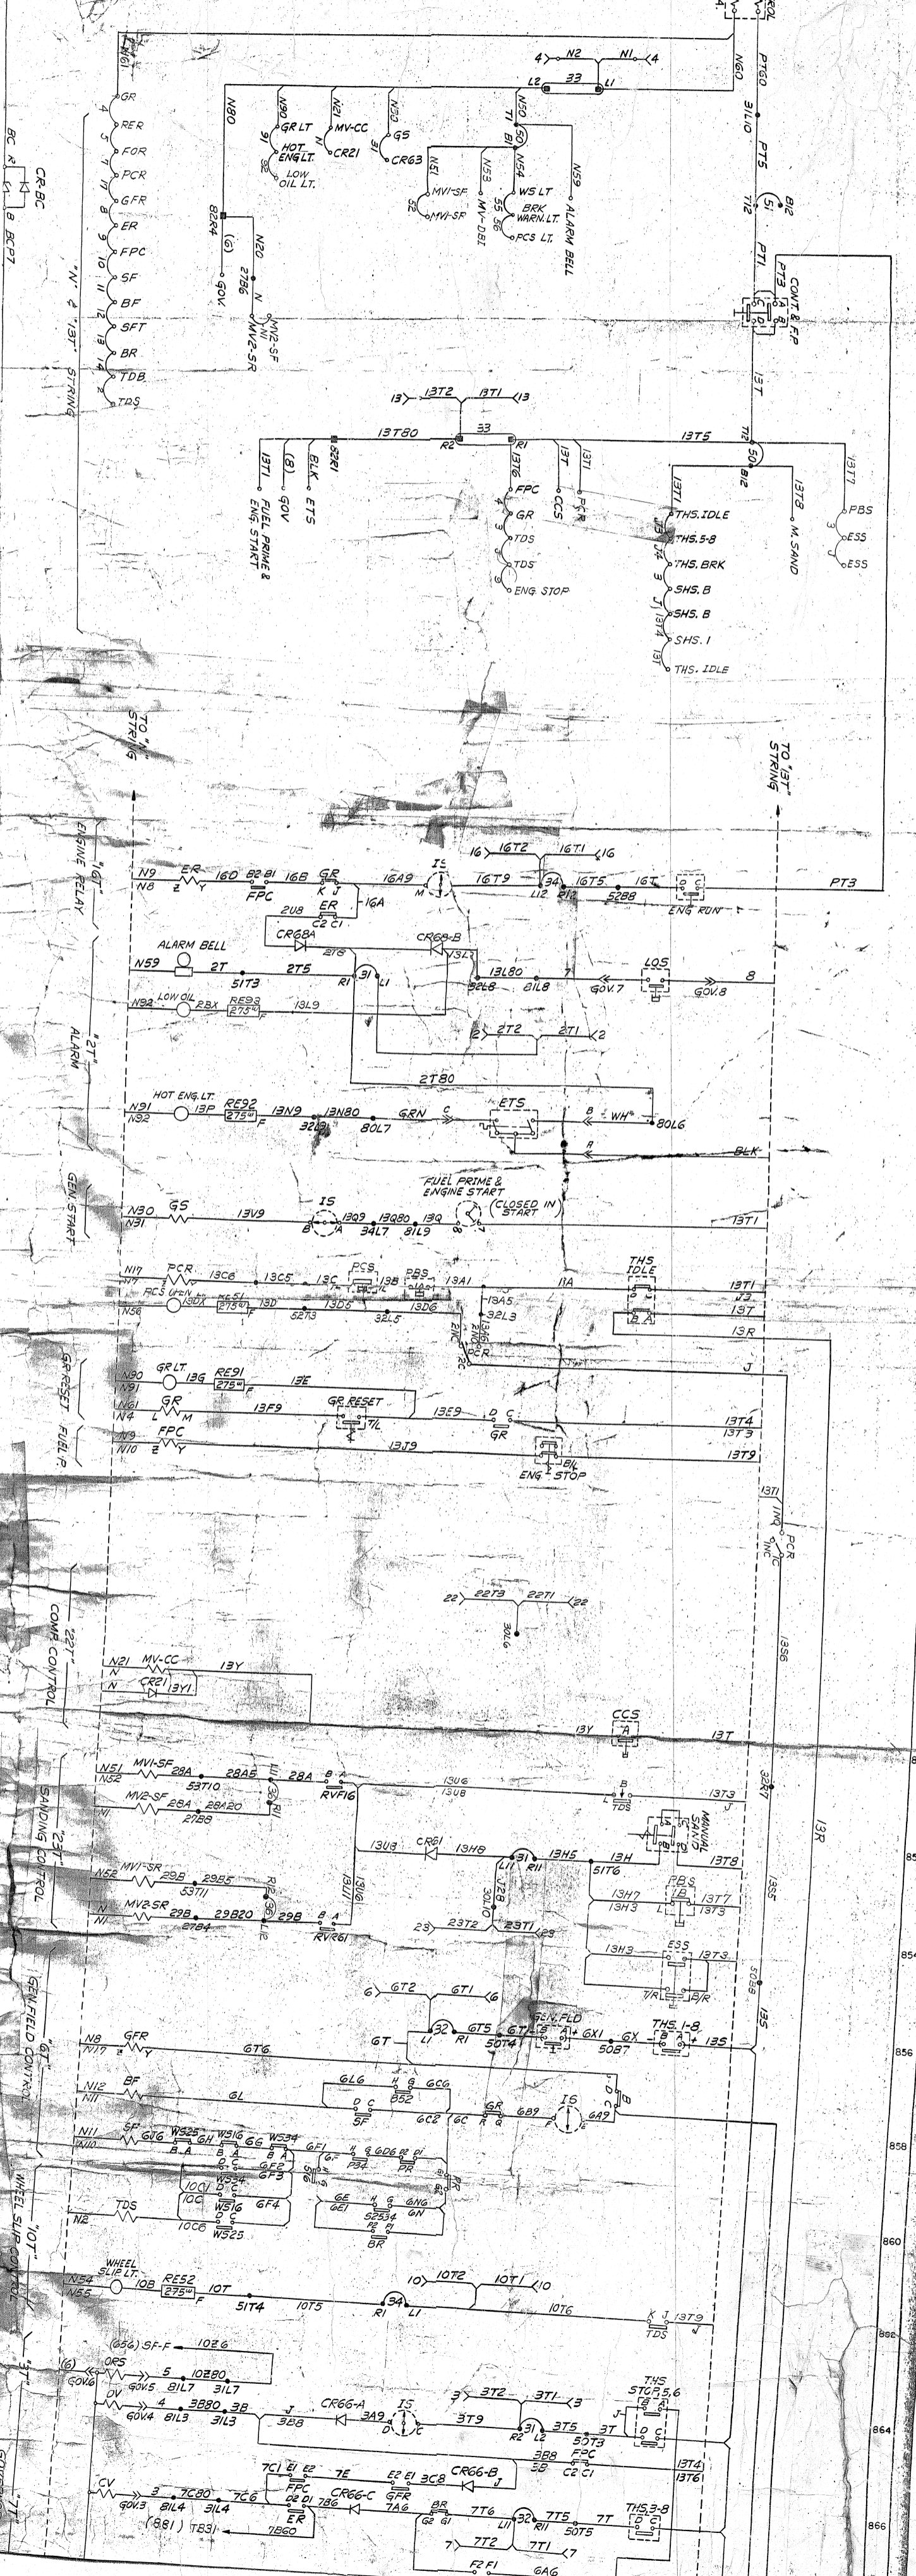

CR-BC  
BC R 1  
B BC P7

TO '137' STRING

ENGINE RELAY

ALARM

GEN. START

GR RESET FUEL P.

COMB CONTROL

SANDING CONTROL

GEN. FIELD CONTROL

WHEEL SLIP CONTROL

WHEEL SLIP CONTROL

GOVERNOR CONTROL

TO '137' STRING

TO '137' STRING

TO '137' STRING

TO '137' STRING

TO '137' STRING

TO '137' STRING

TO '137' STRING

TO '137' STRING